 



thermokon®

HOME OF SENSOR TECHNOLOGY

30
1987-2017
thermokon®

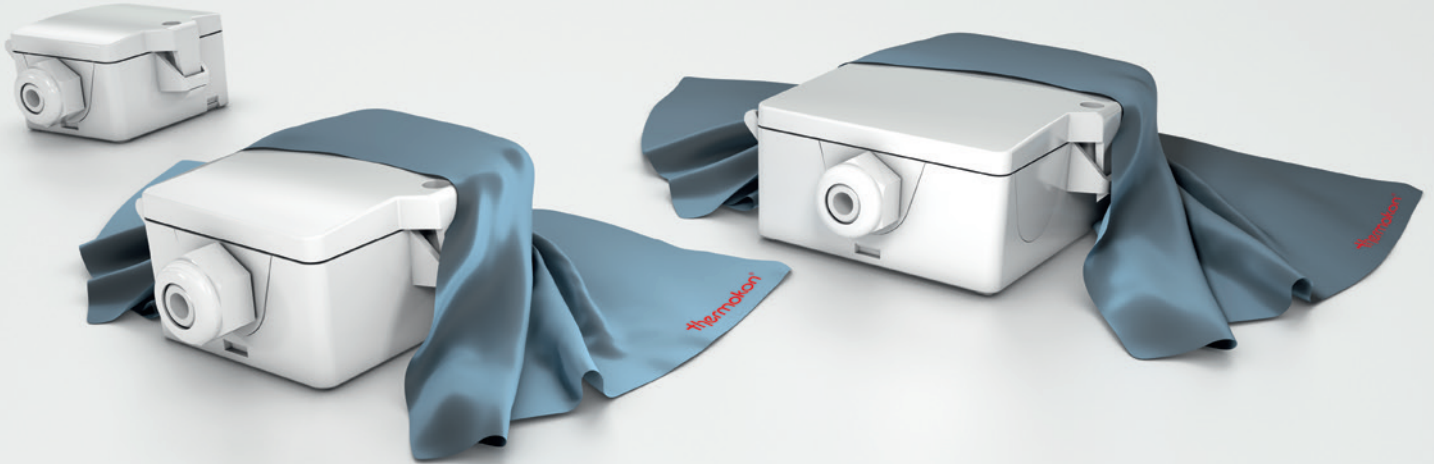

 USE

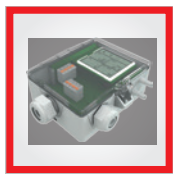

USE -



USE

DIN-

(16, 20, 25),



UNIVERSALLY MOUNTABLE

SAVING TIME

EASY TO INSTALL



Thermokon® -

USE





 
- »
 - »
 - »
 - »
- (TLF)



- »
 - »
 - »
 - »
- 1..10
- Modbus
- 0-10 4...20
- USEapp

THERMOKON® USEapp

- » Thermokon, "USEapp",
- » "USEapp"
- » Bluetooth®
- » Live-Zero-Signal (1-10 . .)
- » « » (TLF)
- » Modbus
- » « »

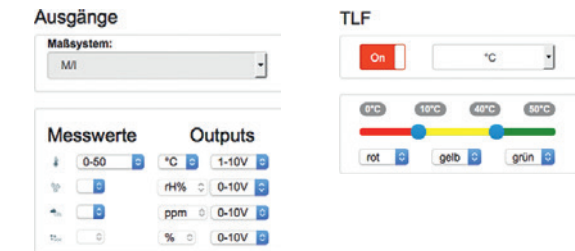

» App Store Google Play:



Thermokon® USEapp




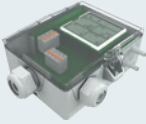



													
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp						
	RPF40+	RPF40+ active	✓						M16	-	■	-	SET 5
	RPF100+	RPF100+ active	✓						M16	-	■	-	SET 5
	AKF10+	passive	✓						M16	■	□	□	SET 1
		TRV/TRA	✓						M16	■	□	□	SET 1
		LCD TRV/TRA			✓			✓	M16	-	□	■	SET 2
		TRV relay		✓				✓	M20	-	□	■	SET 3
		LCD TRV relay			✓			✓	M20	-	□	■	SET 3
		RS485 Modbus		✓				✓	M25	-	□	■	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	□	■	SET 4
	MWF+	passive	✓						M16	-	-	■	SET 2
		TRV/TRA	✓						M16	-	-	■	SET 2
		LCD TRV/TRA			✓			✓	M16	-	□	■	SET 2
		TRV relay		✓				✓	M20	-	□	■	SET 3
		LCD TRV relay			✓			✓	M20	-	□	■	SET 3
		RS485 Modbus		✓				✓	M25	-	□	■	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	□	■	SET 4
MWF400+	passive	✓						M16	■	□	□	SET 1	
	TRV/TRA	✓						M16	■	□	□	SET 1	
	LCD TRV/TRA			✓			✓	M16	-	□	■	SET 2	
	TRV relay		✓				✓	M20	-	□	■	SET 3	
	LCD TRV relay			✓			✓	M20	-	□	■	SET 3	
	RS485 Modbus		✓				✓	M25	-	□	■	SET 4	
	LCD RS485 Modbus			✓			✓	M25	-	□	■	SET 4	

()		
SET 1	M16	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■






□

													
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp						
	SFK02+	passive	✓						M16	-	-	-	SET 2
		TRV/TRA	✓						M16	-	-	-	SET 2
		LCD TRV/TRA			✓			✓	M16	-	-	-	SET 2
		TRV relay		✓				✓	M20	-	-	-	SET 3
		LCD TRV relay			✓			✓	M20	-	-	-	SET 3
		RS485 Modbus		✓				✓	M25	-	-	-	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	-	-	SET 4
	SFK02+ FR	passive	✓						M16	-	-	-	SET 2
		TRV/TRA	✓						M16	-	-	-	SET 2
		LCD TRV/TRA			✓			✓	M16	-	-	-	SET 2
		TRV relay		✓				✓	M20	-	-	-	SET 3
		LCD TRV relay			✓			✓	M20	-	-	-	SET 3
		RS485 Modbus		✓				✓	M25	-	-	-	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	-	-	SET 4
	SFKH02+	passive	✓						M16	-	-	-	SET 2
		TRV/TRA	✓						M16	-	-	-	SET 2
		LCD TRV/TRA			✓			✓	M16	-	-	-	SET 2
		TRV relay		✓				✓	M20	-	-	-	SET 3
		LCD TRV relay			✓			✓	M20	-	-	-	SET 3
		RS485 Modbus		✓				✓	M25	-	-	-	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	-	-	SET 4
TFR+	TFR+				✓			M16	-	□	□	SET 5	

()		
SET 1	M16	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□

													
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp						
AGS54+	passive	✓						M16	□	■	-	SET 5	
	AGS55+	passive	✓					M16	□	■	-	SET 5	
		TRV/TRA	✓					M16	□	■	-	SET 5	
		LCD TRV/TRA			✓			✓	M16	□	■	-	SET 5
		TRV relay		✓				✓	M20	□	■	-	SET 6
		LCD TRV relay			✓			✓	M20	□	■	-	SET 6
		RS485 Modbus		✓				✓	M25	□	■	-	SET 7
LCD RS485 Modbus			✓			✓	M25	□	■	-	SET 7		
VFG54+	passive	✓						M16	-	-	-	SET 2	
	TRV/TRA	✓						M16	-	-	-	SET 2	
	LCD TRV/TRA			✓			✓	M16	-	-	-	SET 2	
	TRV relay		✓				✓	M20	-	-	-	SET 3	
	LCD TRV relay			✓			✓	M20	-	-	-	SET 3	
	RS485 Modbus		✓				✓	M25	-	-	-	SET 4	
AF25+	LCD RS485 Modbus			✓			✓	M25	-	-	-	SET 4	
	TRV/TRA	✓						M16	-	■	-	SET 5	
	LCD TRV/TRA			✓			✓	M16	-	■	-	SET 5	
	TRV relay		✓				✓	M20	-	■	-	SET 6	
	LCD TRV relay			✓			✓	M20	-	■	-	SET 6	
	RS485 Modbus		✓				✓	M25	-	■	-	SET 7	
LCD RS485 Modbus			✓			✓	M25	-	■	-	SET 7		

()		
SET 1	M16 ()	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■


□

												
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
	PR25+	TRV/TRA	✓					M16	-	■	-	SET 5
		LCD TRV/TRA			✓		✓	M16	-	■	-	SET 5
		TRV relay		✓			✓	M20	-	■	-	SET 6
		LCD TRV relay			✓		✓	M20	-	■	-	SET 6
		RS485 Modbus		✓			✓	M25	-	■	-	SET 7
		LCD RS485 Modbus			✓		✓	M25	-	■	-	SET 7
	OF14+	TRV/TRA	✓					M16	-	■	-	SET 5
		LCD TRV/TRA			✓		✓	M16	-	■	-	SET 5
		TRV relay		✓			✓	M20	-	■	-	SET 6
		LCD TRV relay			✓		✓	M20	-	■	-	SET 6
		RS485 Modbus		✓			✓	M25	-	■	-	SET 7
		LCD RS485 Modbus			✓		✓	M25	-	■	-	SET 7
TF14+	TRV/TRA	✓					M16	-	■	□	SET 5	
	TRV/TRA	✓					M16	-	■	□	SET 5	
	LCD TRV/TRA			✓		✓	M16	-	■	□	SET 5	
	TRV relay		✓			✓	M20	-	■	□	SET 6	
	LCD TRV relay			✓		✓	M20	-	■	□	SET 6	
	RS485 Modbus		✓			✓	M25	-	■	□	SET 7	
	TF25+	LCD RS485 Modbus			✓		✓	M25	-	■	□	SET 7

()		
SET 1	M16	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□

													
			 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
	FT-RDF18+	VV	✓						M16	-	■	-	SET 5
		AA	✓						M16	-	■	-	SET 5
	FTK+	VV/AA	✓						M16	-	□	■	SET 2
		LCD VV/AA			✓			✓	M16	-	□	■	SET 2
		VV relay		✓				✓	M20	-	□	■	SET 3
		LCD VV relay			✓			✓	M20	-	□	■	SET 3
		RS485 Modbus		✓				✓	M25	-	□	■	SET 4
		LCD RS485 Modbus			✓			✓	M25	-	□	■	SET 4
	WSA	VV/AA	✓						M16	-	-	-	SET 5
		RS485 Modbus		✓				✓	M25	-	-	-	SET 6
	FTA54+	VV		✓					M16	-	■	-	SET 5
		AA		✓					M16	-	■	-	SET 5
		LCD VV/AA			✓			✓	M16	-	■	-	SET 5
		VV relay		✓				✓	M20	-	■	-	SET 6
		LCD VV relay			✓			✓	M20	-	■	-	SET 6
		RS485 Modbus		✓				✓	M25	-	■	-	SET 7
		LCD RS485 Modbus			✓			✓	M25	-	■	-	SET 7
/	WK01+	24 V	✓						M20	-	-	-	SET 3
		ext. 24 V	✓						M20	-	■	-	SET 6
		230 V					Q4 2017						
		ext. 230 V					Q4 2017						

()		
SET 1	M16	1x 1x 1x () 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□

												
			 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp				
DPA+	VV				✓		✓	M16	-	■	-	SET 2
	AA				✓		✓	M16	-	■	-	SET 2
	LCD VV/AA					✓	✓	M16	-	■	-	SET 2
	VV relay				✓		✓	M20	-	■	-	SET 3
	LCD VV relay					✓	✓	M20	-	■	-	SET 3
	RS485 Modbus				✓		✓	M25	-	■	-	SET 4
	LCD RS485 Modbus					✓	✓	M25	-	■	-	SET 4

()		
SET 1	M16 ()	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

												
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
LK+ CO2+VOC	VV		✓				✓	M16	-	-	■	SET 2
	AA		✓				✓	M16	-	-	■	SET 2
	LCD VV/AA			✓			✓	M16	-	-	■	SET 2
	3xV/4xV		✓				✓	M20	-	-	■	SET 3
	LCD 3xV/4xV			✓			✓	M20	-	-	■	SET 3
	VV relay		✓				✓	M20	-	-	■	SET 3
	LCD VV relay			✓			✓	M20	-	-	■	SET 3
	RS485 Modbus		✓				✓	M25	-	-	■	SET 4
	LCD RS485 Modbus			✓			✓	M25	-	-	■	SET 4
	Temp RS485 Modbus		✓				✓	M25	-	-	■	SET 4
	LCD Temp RS485 Modbus			✓			✓	M25	-	-	■	SET 4
	Temp_rH RS485 Modbus		✓				✓	M25	-	-	■	SET 4
LCD Temp_rH RS485 Modbus			✓			✓	M25	-	-	■	SET 4	

()		
SET 1	M16	1x 1x 1x () 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□

												
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
LK+ CO2	V/VV		✓				✓	M16	-	-	■	SET 2
	AA		✓				✓	M16	-	-	■	SET 2
	LCD VV/AA			✓			✓	M16	-	-	■	SET 3
	3xV		✓				✓	M20	-	-	■	SET 3
	LCD 3xV			✓			✓	M20	-	-	■	SET 3
	VV relay		✓				✓	M20	-	-	■	SET 3
	LCD VV relay			✓			✓	M20	-	-	■	SET 3
	Temp RS485 Modbus		✓				✓	M25	-	-	■	SET 4
	LCD Temp RS485 Modbus			✓			✓	M25	-	-	■	SET 4
	Temp_rH RS485 Modbus		✓				✓	M25	-	-	■	SET 4
LCD Temp_rH RS485 Modbus				✓		✓	M25	-	-	■	SET 4	




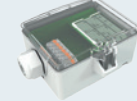



()		
SET 1	M16	1x 1x 1x () 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

												
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
LK+ CO2 100	V/VV		✓				✓	M16	-	□	■	SET 2
	AA		✓				✓	M16	-	□	■	SET 2
	LCD VV/AA			✓			✓	M16	-	□	■	SET 3
	3xV		✓				✓	M20	-	□	■	SET 3
	LCD 3xV			✓			✓	M20	-	□	■	SET 3
	VV relay		✓				✓	M20	-	□	■	SET 3
	LCD VV relay			✓			✓	M20	-	□	■	SET 3
	Temp RS485 Modbus		✓				✓	M25	-	□	■	SET 4
	LCD Temp RS485 Modbus			✓			✓	M25	-	□	■	SET 4
	Temp_rH RS485 Modbus		✓				✓	M25	-	□	■	SET 4
LCD Temp_rH RS485 Modbus				✓		✓	M25	-	□	■	SET 4	

()		
SET 1	M16 ()	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□

												
		 USE-S	 USE-M	 USE-M (LCD)	 USE-L	 USE-L (LCD)	 USEapp					
LK+ VOC	V/VV		✓				✓	M16	-	□	■	SET 2
	AA		✓				✓	M16	-	□	■	SET 2
	LCD VV/AA			✓			✓	M16	-	□	■	SET 3
	3xV		✓				✓	M20	-	□	■	SET 3
	LCD 3xV			✓			✓	M20	-	□	■	SET 3
	VV relay		✓				✓	M20	-	□	■	SET 3
	LCD VV relay			✓			✓	M20	-	□	■	SET 3
	Temp RS485 Modbus		✓				✓	M25	-	□	■	SET 4
	LCD Temp RS485 Modbus			✓			✓	M25	-	□	■	SET 4
	Temp_rH RS485 Modbus		✓				✓	M25	-	□	■	SET 4
LCD Temp_rH RS485 Modbus				✓			✓	M25	-	□	■	SET 4

()		
SET 1	M16 ()	1x 1x 1x 1x 2x
SET 2	M16 M16	1x 1x 2x
SET 3	M20 M20	1x 1x 1x 2x
SET 4	M25 Wago	1x 1x 1x 2x
SET 5	M16	1x 1x 2x 2x
SET 6	M20 M20	1x 1x 1x 2x 2x
SET 7	M25 Wago	1x 1x 1x 2x 2x

: ■

□



LOUIS VUITTON

WALDORF ASTORIA

Changi City Point

Tomson Riviera

thermokon®

HOME OF SENSOR TECHNOLOGY



Thermokon Sensortechnik GmbH

Platanenweg 1 | 35756 Mittenaar | Germany
Phone: +49 2778 6960-0 | Fax: +49 2778 6960-400
email@thermokon.de | www.thermokon.de

AUSTRIA

Thermokon Components GmbH

Heid-Werkstraße 4 | 2000 Stockerau
Phone: +43 2266 67485 | Fax: +43 2266 67485-34
info@thermokon.at | www.thermokon.at

CHINA

Thermokon Automation Equipment Co. Ltd.

479 Chun Dong Road | Xin Zhuang Industry Park,
Building C-1, 2/Floor | 201108 Shanghai
Phone: +86 21 5176 0211 | Fax: +86 21 5176 0213
info@thermokon.asia | www.thermokon.asia

FINLAND

Thermokon Sensor Technology Finland OY

Edelfeltinkatu | 48200 Kotka
Phone: +358 40 5525 442
info@thermokon.fi | www.thermokon.fi

HONG KONG

Thermokon Sensor Technology Ltd.

Rm. 2001, 20/F, St. George's Building | 2, Ice House Street
Central Hong Kong
Phone: +852 3468 8636 | Fax: +852 3621 0002
info@thermokon.asia | www.thermokon.asia

NETHERLANDS

Thermokon Sensor Technology Nederland B.V.

Rozenstraat 11 | 6361 HS Nuth
Phone: +3165 05 50 61 99
email@thermokon.nl | www.thermokon.nl

SWEDEN

Thermokon-Danelko Elektronik AB

Metallgatan 1b | 26272 Ängelholm
Phone: +46 4 31448454 | Fax: +46 4 3114 19 0
info@thermokon.se | www.thermokon.se

SWITZERLAND

Thermokon Sensortechnik Schweiz AG

Zürichstraße 46 | 8303 Bassersdorf
Phone: +41 447 5250-00 | Fax: +41 447 5250-01
email@thermokon.ch | www.thermokon.ch

USA

Thermokon Americas LP

FOR DETAILS PLEASE SEE:
www.thermokon.de/en/contact/
international-locations.html

NORWAY

Thermokon Norge AS

FOR DETAILS PLEASE SEE:
www.thermokon.de/en/contact/
international-locations.html